



P637A
Megaphone



15W Indoor / Outdoor Megaphone
Record / Playback / Siren Functions
Adjustable Volume
Folding Handle

IMPORTANT

Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE


Inspect the product for signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- Splash proof only, do not submerge in water.
- Use only the correctly rated and type of battery.
- DO NOT mix new and used batteries as this will affect the battery life.
- Observe correct polarity when fitting batteries.
- DO NOT point directly at any person who is closer than 3.5m (10ft) from the megaphone and always adjust the volume to the conditions.

FITTING BATTERIES


To fit the batteries first release the battery compartment by pushing the catch in at the rear of the handle and open cover.

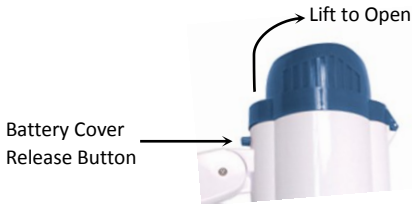

Insert 4 x D type batteries, observing the correct polarity on the base and cover.

Replace the cover and securely push till the button clicks

OPERATION

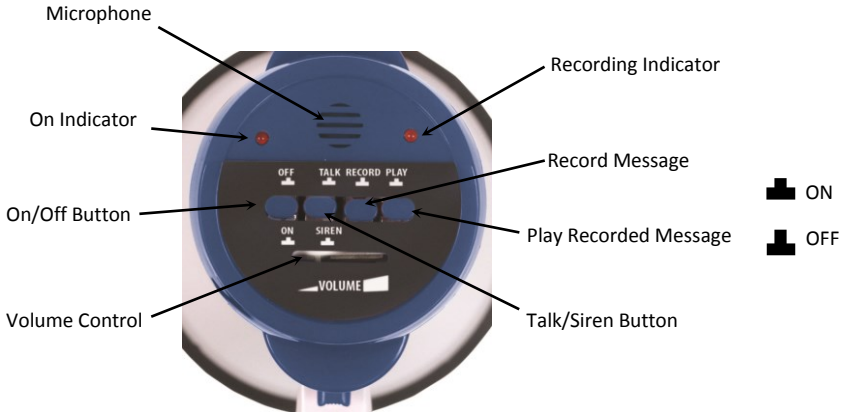

The P637A megaphone can be used in several ways, before use turn the volume to its minimum position and increase as necessary. Never start with the volume at the max level;

1. To use as a conventional megaphone ensure that all the buttons are in the OFF position (out) and then push the On/Off button ON (in) (the ON indicator will illuminate). You can now talk through the microphone and the sound will be amplified according to the volume level set by the slider control.
2. The P637A can be used as a siren, to do so push the Talk/Siren button IN and then push the ON button. The siren will continue till the ON/OFF or Talk/Siren buttons are switched to the OFF position.
3. The megaphone has a 8s record function. If you wish to make a repeated announcement first press the Record button in, then press the ON/OFF button to begin recording (the Record indicator will illuminate). The maximum record time is 8s. When finished push either the Record or ON/OFF button to stop recording. To play back push the Play button (ensure the Record button is in the OFF position) then the ON/OFF button, the recording will playback as a loop until the ON/OFF or Play buttons are turned OFF.

DISPOSAL AND RECYCLING

You must not dispose of this unit with domestic household waste.

Most local authorities have specific collection system for electrical items and disposal is free of charge to the end-user.

TECHNICAL SPECIFICATION

Dimensions (Folded):	245×160×160 mm
(Open).....	245 x 230 x 160 mm
Weight: (Inc. Batteries).....	1.1 kg
(Exc. Batteries).....	0.5 kg
Batteries: (Not Supplied)	4 x D Cell 1.5 V
Effective Distance (depending on conditions).....	up to 500m

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Electrovision Ltd.,
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX
www.electrovision.co.uk

