

KeyCovers Size Guide

Stock code	Model	Dimensions	Brand	Models	Brand	Models
127.210UK	KC2 (Mini key)	684 x 170/252 x 35mm	MIDITECH	GARAGE KEY, MK49, X-TREME CONTROL, TQ49, Garagekey Mini	YAMAHA	PSS12/14/15/16/21/26/190/280/290/390/CBX-K1
			M-AUDIO	OZONE, OXYGEN 8, E-KEYS	NORD	Nord Modular G2
			CASIO	MA100/101.120/130/150/201/220, PA31/81/480, RAP1, SA20/21/35/38/39/45/67/75, SK60/65, TA10, VA10		
127.211UK	KC3 (4 Octave)	878 x 253/287 x 40mm	MIDITECH	MIDI MASTER PLUS, MIDI PLUS, MIDI PRO, MIDI COMPOSER, MIDI START, MIDI STUDIO 2, MIDI CONTROL 2, MC2, MIDISTART MUSIC, MIDISTART-3, groovestation	NORD	Nord Lead A1, Nord Lead 4, Nord Lead 2X, Nord Wave, Nord Lead 3, Nord Lead 2, Nord Lead
			CASIO	CA100/110, CT380/395, CTK50/100/120/150/200/230, DM100, MT640, MT740, SA65	ROLAND	AX-09 (Black Sparkle), AX-09 (White)
			FATAR	STUDIO 49	M-AUDIO	AXIOM 49, KEYSTATION 49E, RADIUM 49, OZONIC, OXYGEN 49, Venom
			KORG	PROPHECY, K49, RK-100S KEYTAR, microKEY 61	YAMAHA	PSR3/6/8/16/73/74/75/125, PSS31/680/760/780/790/795, CBX-K2, MX49
			MIDITECH	MSTART		
127.212UK	KC4 (4/5 Octave)	973 x 266/398 x 60mm	MIDITECH	MK61, PRO 61, MIDI PLUS 61/61U, i2 61 black edition	KORG	X5, X5D, KROSS-61, Pa3X
			CASIO	CTK80/230/451/481/491/495/496/519/531/541/551/571/560L/573/591/611/620L/631/651/671/680/691/700/731/800/900/2000/3000/4000/5000, LK30/35/43/45/50/55/60/65/110/220/70S/90TV/93TV, CTX450, MT750, XW-G1 DJ Synthesiser, XW-P1 Performance Synthesiser, CTK-7200/6200/4200/2200/3200/240/1100, WK-7600, LK-120 Key Lighting keyboard	YAMAHA	AN1X, CS1X/2X, DJX, DX21, EZ200, EZAG20/30/150/250i, PSR77/100/160/170/172/175/195/202/225GM/206/215/220/225/270/273/275/280/290/292/293/295/340/350/410/420/450/540/630/640/730/740/1000/1500/2000/3000/K1, PSRA300/1000, PSRE203/213/303/313/413, S03/3SL, YPT200/300, PSRAS500, PSRS5500, PSR-S650, PSR-S750, PSR-S950, PSR-E443, PSR-E433, EZ-220, PSR-E343, PSR-E243, YPT-220
			GENERAL MUSIC	CD1/2/3/10/20/30, GK310/330/340/350, WK1/1000, gk 360	ROLAND	C180, E15/16/28/35-400R, EM10/15/20/25, 150R, EP3/5, JP8000, JV30, JX30, JX3P, SK50, EG101, SH201, VP550/770
			M-AUDIO	RADIUM 61, Axiom AIR 61	TECHNICS	KC200/211/600/611, KN300/470/500/550/570/650/700/750, MB100
			NORD	NORD C2D, Nord C2, Nord C1	NOVATION	Launchkey 61, 61SL (61 key)
127.213UK	KC5 (5 Octave)	1060 x 279/448 x 60mm	CASIO	CPS120, CTK560L/620L/631/731/750/1000, CT450/460/625/6000, HT3000/6000, VZ1	TECHNICS	KN501/600/700/701/720/770/800/901/920/930/1000/1200/1400/1500/1600/2000/2400/2600/3000/3500/5000/6000/6500/WSA1
			ENSONIQ	TS10, ASR10	NORD	Nord Pedal Keys 27, Nord Modular G2X
			KORG	PA50, TRITON LE61, i5S, X3, M1, 01W, T3, T3EX, WS, WAVESTATION ES, NS, TRITON, TR6/76, KRONOS X (61-Key), KRONOS (61-Key), KROME-61, Pa900, Pa600, Pa600QT, Pa50SD, Pa300, KingKORG	YAMAHA	CS6K, ES6, PSR28/900/1100/2100/4000/7000/8000, SR500/1000/2000/3000, DX7, MO6, MOTIV6, MOTIV S30, SY77/85, PSRS700, V50, TYROS, MOX6, MOXF6, MOTIF XF6, PSR-A2000, NP-11
			ROLAND	E09/09W/100, EM30/50/55/550R, JD800, VA3, V SYNTH, E09/12/14/20/36/38/50/66/68/300, EXR3/35/55/75/40R/400R460R, FANTOM S/G6/X6/XA, GW7, JUNO D/G, JV35/50/80/180, JW50, JX1/305, R55/50/70, XP10/30/50/60, PRELUDE, GW8, JUNO-Gi, JUNO-Di, JUNO-Di (White), GW-8, FA-06, BK-5, BK-5 OR, BK-3 (Black), BK-3 (White), E-09 (White), E-09 (Black), V-Combo VR-09	GENERAL MUSIC	gk 380
127.214UK	KC6 (6.25 Octave)	1175 x 303/430 x 60mm	CASIO	CK30, CTK71EX/81EX, CPS7, CTK930, HTX10/50, LK73/80, MZ2000, WKS500/1200/1300/1350/1500/2000	GENERAL MUSIC	WK2/3/4/6/B, WK2000HD/2000SE, WS2, WX2, EQUINOX 61, PRP8, GENESYS, GENESYS PRO, GENESYS S, WERSI - IKARUS
			KETRON	KETRON X1, XD9, SD1, SD5, VEGA, AUDYA, SD5 Standard, SD5 Version 2	TECHNICS	KN7000
			KORG	CK3, i540/50, PA1X/60/80/800, TRITON STUDIO 61, i3, i30, TRINITY, TRINITY PLUS, TRINITY V3, iX300, N364, Z1, TRITON EXTREME 61, SV-1-73 Black	ROLAND	ES6/70/86/96/500/600, EM2000, EP7/75/76/77/760, G600, KR33/55, RD200, EP7-LLE, VK7/8, V SYNTH GT, RD-64, AX-Synth (Black Sparkle), AX-Synth (White), VK-8
			YAMAHA	DGX200/202/230/300/305/203, PSR6000/9000, QS300, W7, YPP50/100, EX7, TYROS, TYROS 2, YFP70, Tyros5-61, Tyros4	NORD	Nord Electro 4 SW73, Nord Stage 2 HA76, Nord Stage EX (Keys-76), Nord Electro 3 Seventythree, Nord Stage Classic 76
127.215UK	KC7 (6.25 Octave)	1267 x 270/472 x 60mm	CASIO	CPS505/700/720, WK1600/1630/1800/3000/3200/3500/3700	ENSONIQ	KS32, S02
			TECHNICS	PR100/110	KORG	TRITON PRO, 01 WPRO, TRITON LE76, PA2X PRO, KRONOS X (73-Key),
			ROLAND	A30/33/37/50/70, D70, DISCOVER 5, E60/80, G800/1000, EXR7, FA76, FANTOM, FANTOM X7, JV90/1000, KR100/500, RD250, VA5/77/76, XP80, JUNO DM/STAGE, JUPITER-80 Version 2, V-Combo VR-700	YAMAHA	CLP152S, DGX205/EX5, PDP100, MOTIV7, PSR2500/3500/4500/4600/6700/9000P RO/PSRGX76, MOTIV ES7, SY99, YPP45/55, YPRS0, TYROS2/3, NP30/30S, MOTIF XF7, NP-31, NP-V80, NP-V60, BK-9
			KETRON	GP1	KURZWELL	PC3K7, PC3LE7
			GENERAL MUSIC	PROMEGA, PROMEGE 2, S3, SX3, SK76/760, WK1600/1800, GENESYS PRO, WERSI - ABACUS		
127.216UK	KC8 (7.25 Octave)	1385 x 338/470 x 60mm	CASIO	AP21/24/33/38/45/80R, CPS805/85, PL40R, PS20, PX100/110LB/110DK /300/300L/310/400R/500L/700, PRIVIA PX120/320, CDP100/200R	FATAR	SL990, STUDIO 900, STU2001, STU90+, STUDIO LOGIC 880
			GENERAL MUSIC	PRO2, POMEGA 3, SK88/880, RPBASIC, RP8/15, EQUINOX 76	KAWAI	CL20, CN270, ESS, ES4, SLB110, ES1/3, L1, MP4, MP 11, MP 10, MP7, MP6, VPC1
			KORG	C3200/6500, EC120/150/350, SGPXOX, SG1D, SP250, N1, TRITON STUDIO 76, i2, X2, TRINITY PRO, TRINITY V3 PRO, N264, SP100/200/300/500, PA1X PRO, TRITON EXTREME 76, SV-1-88 Black, SP-280	ROLAND	A80, EP9E/85/97, FP1/2/3/4/5/8/9, F30/30E/50/90/100, G70, KR350/650, KF7/90, MP500WB, RD100/150/170/600, VR760, E80, FANTOM GP, EP880, FP-50 (Black), FP-50 (White)
			YAMAHA	CLP80/153S, DGX500/505, PFP100, PFB5, P60/60S/70/70S/80/90/120/120S/140/140S/150/200/250/300, PDP400, MO8, S80/90, S08, WS, YDP113/123/223, YPP200, P-255, P-35, P-155, P-105, CP4 STAGE, CP40 STAGE, CP1, CP5, CP50	TECHNICS	PC8/12/25/26, PX201M, P30/50, SP30
			ALESIS	QX88		
			KURZWELL	Forte, Artis, PC3K8		